

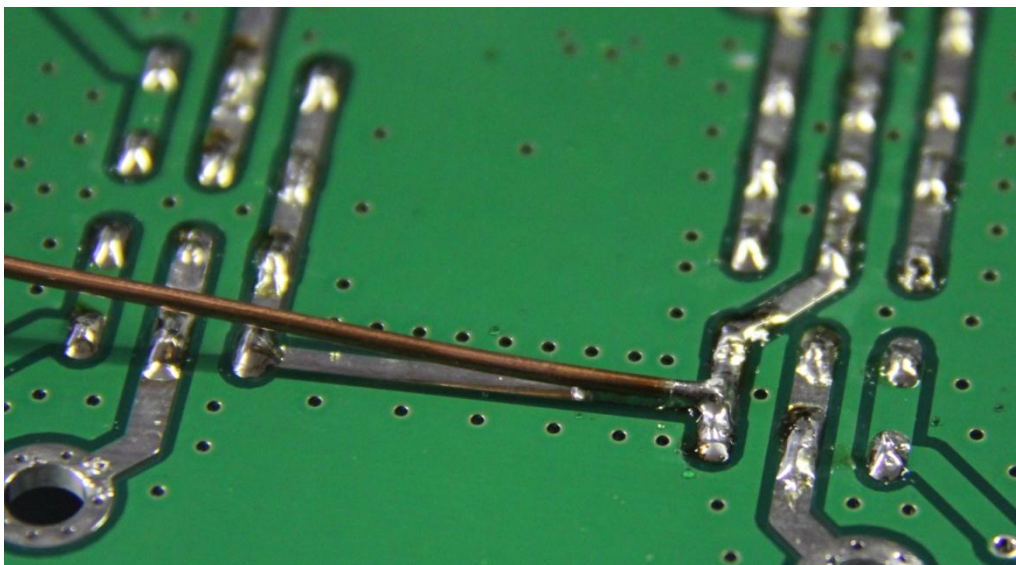
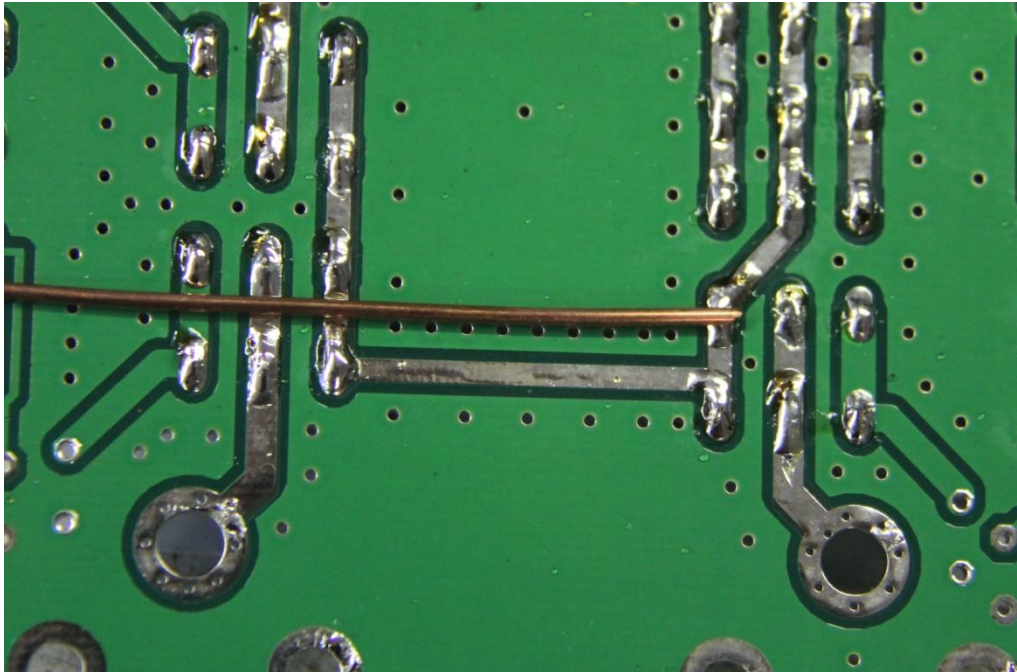




Construction hints for QRO.cz PCBs

1. Solder Cu wire on RF microstrip lines:

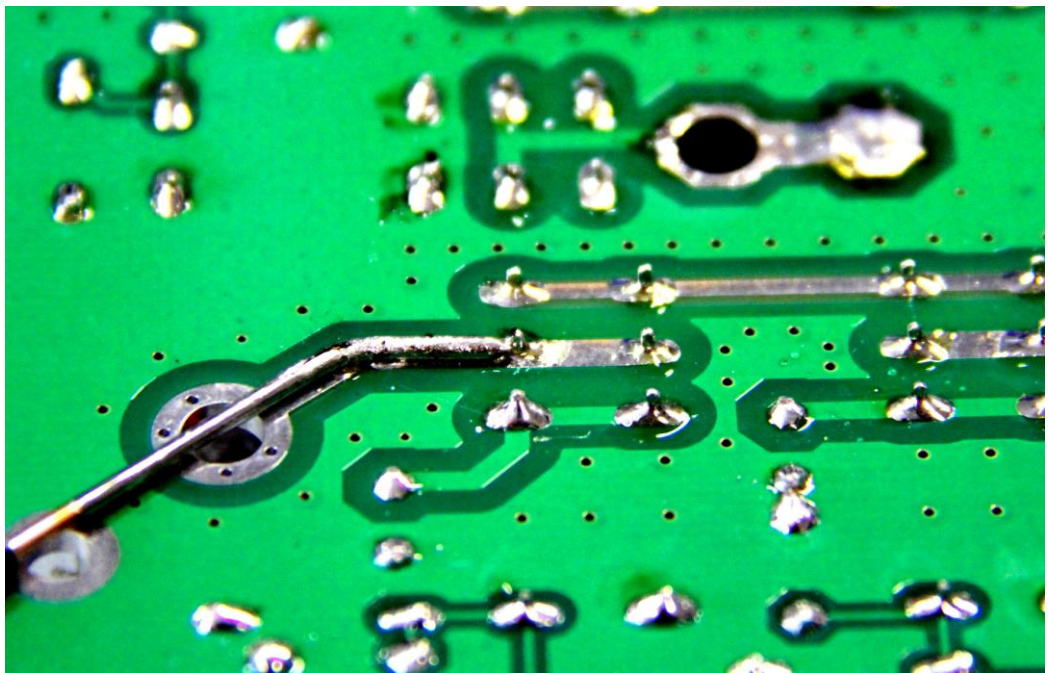

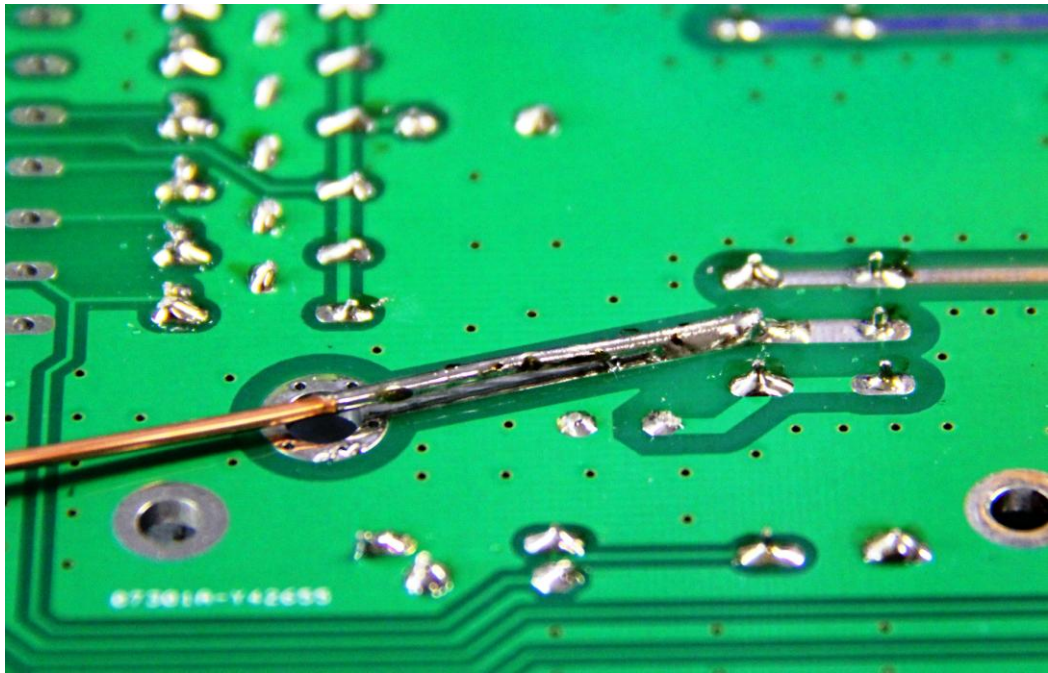

2. Clean PCB in Alcohol or Isopropylalcohol

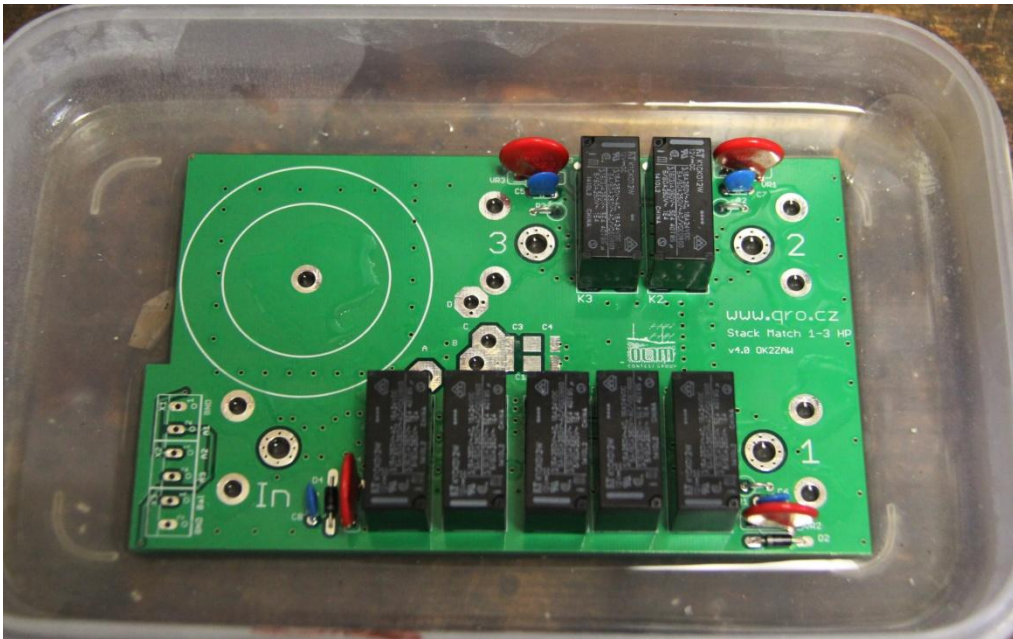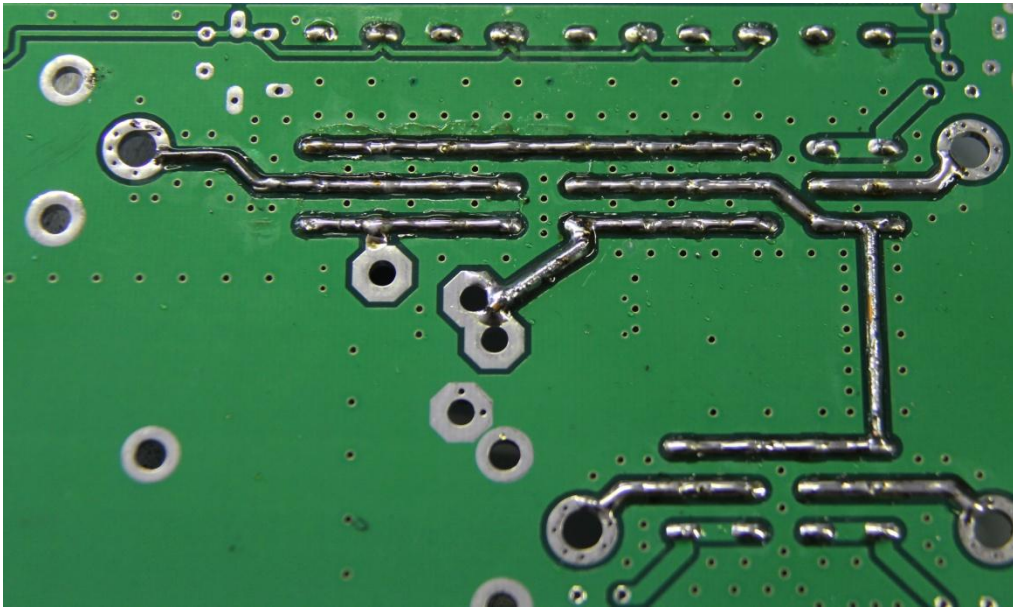

3. Use Coating (High voltage lacquer) and protect RF lines against humidity

